



*Auguste Galan*



### **AUTOMATIC SKELETON INSTRUCTIONS**

**Automatic Watches:** Automatic watches are powered by self-winding movements, which means the winding of the main-spring occurs automatically when the wearer moves his/her arm. However, it is recommended that you manually wind the watch a few turns after the watch has not been in use and is stopped. Do not overwind. It is also important to adjust the time periodically, as automatic movements can gain or lose a few minutes per month. These watches never require battery changes. The exact amount of power remaining in the main-spring is the result of the level of activity of the wearer. Typically, between 24 and 36 hours of reserve power will remain after wearing.

#### **General Care** — All watches:

Always keep the setting-stem ('crown') closed when not adjusting. Never attempt to adjust the watch if moisture is present on the case. Water-resistant watches are designed to be protected from damage due to exposure with water. However, it is not recommended that these watches be intentionally submerged in water or exposed to moisture. If exposed to salt or chlorine water, fresh water should be sprinkled on the watch and then dried off. These are delicate mechanical instruments. While shock protected, they should not be subjected to excessively rough conditions. If the crystal (lens) cracks or breaks, have the watch serviced at once.

#### **SETTING THE WATCH:**

##### **STANDARD 3 HAND SKELETON:**

To set time, gently pull crown (stem) out to position "B" (1-click) as indicated above. Rotate stem clockwise to advance hands. Do not set hands backwards. When the correct time is showing, press crown back in to position "A".

Please note that the picture above to left is one version and these same instructions apply to all Auguste Galan watches which use the Skeletonized Automatic movement. Movement Cal. HZ-2189 Auto-Winding Mechanical 3-Hands



##### **6 HAND MULTI-FUNCTION SKELETON:**

**Setting the Time:** To set the time, pull crown out and rotate the hands to current time. Please observe 24-hour dial to determine AM or PM. Return crown to original position.

**Setting the Day:** To set day of week, press top pusher button located at 2 O'clock until current day is indicated.

**Setting the Date:** To set date of month, press bottom button located at 4 O'clock until current date is indicated.

Please note that the picture to left is one version and these same instructions apply to all Auguste Galan watches which use the 6 Hand Multi-Function Skeletonized Automatic movement.

#### **Deployment Buckles (strap models)**

The system is designed so that you only need to set the size once. Thereafter, the pushbutton (2) opens the buckle to put on and take off. You first need to open the top of clasp (1) so that strap moves inside of metal bracket. Find the correct size and allow the prong (3) to fit inside the proper hole on strap. Then close bracket (1) on top of leather. Thereafter, use buttons (2) to open both sides of buckle. Improper set-up/use will damage the buckle and/or the leather.

