




INSTRUCTIONS:



Automatic Watches:

Automatic watches are powered by self-winding movements, which means the winding of the main-spring occurs automatically when the wearer moves his/her arm. However, it is recommended that you manually wind the watch a few times periodically and especially after periods when the watch has not been in use. It is also important to adjust the time periodically, as automatic movements can gain or lose a few minutes per month. These watches never require battery changes. The exact amount of power remaining in the main-spring is the result of the level of activity of the wearer. Typically, between 24 and 36 hours of reserve power will remain after wearing.

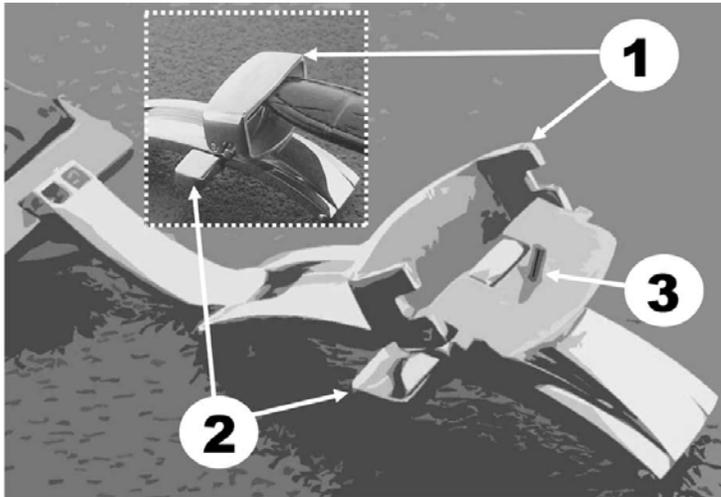

Deployment Buckle:

The system is designed so that you only need to set the size once. Thereafter, the pushbutton (2) opens the buckle to put on and take off. You first need to open the top of clasp (1) so that strap moves inside of metal bracket. Find the correct size and allow the prong (3) to fit inside the proper hole on strap. Then close bracket (1) on top of leather. Thereafter, use buttons (2) to open both sides of buckle. Improper set-up/use will damage the buckle and/or the leather.

ALLDATE:

Setting Time:

Pull crown out and rotate clockwise to current time. Please note the sun/moon indicator at 6 O'clock to determine AM or PM. position.

Setting day/month/date:

To set the day, depress recessed button at 10 O'clock. To set the month, depress button at 2 O'clock. To set the date, depress button at 4 O'clock. This watch features a quick-set calendar. The calendar normally advances automatically when the time approaches 12-pm. The only time you should need to adjust the calendar is if the month has less than 31 days or if the watch has been left inactive. You can simply move the hand forward past 12-pm, as many cycles as is required to get the calendar synchronized, or, you can use the quick-set feature. Never use the quick-set feature when the time showing on the dial is between 9-pm and 3-am, as this might cause a mechanical conflict involving the normal automatic advance sequence. If necessary, advance the hands past 3-am and when you are finished setting the calendar, advance the time to the correct hour/minutes. Keep in mind that the calendar will automatically advance again, at about midnight. Never move the hands backward, more than a few minutes (30 minutes).

Initiate Power:

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).



example watch



example watch

ALLDATE GB & SB**Setting Time:**

Pull crown out and rotate clockwise to current time. Return crown to original position.

Setting Year/Month:

To set the year, depress the recessed button at 10 O'clock position. To set the month, depress the button at the 2 O'clock position.

Setting Day/Date:

To set the day, depress the recessed button at 8 O'clock position. To set the date, depress button at 4 O'clock position. Do not adjust between 9pm and 3AM to prevent damage to the movement.

Initiate Power:

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).

DATEVUE:**Setting the Time:**

Pull crown out and rotate the hands to current time. Return crown to original position.

Setting Calendar:

Depress recessed button at the 2 O'clock position. Each time you depress the button, the calendar will advance one day. This watch features a quick-set calendar. The calendar normally advances automatically when the time approaches 12-pm. The only time you should need to adjust the calendar is if the month has less than 31 days or if the watch has been left inactive. You can simply move the hand forward past 12-pm, as many cycles as is required to get the calendar synchronized, or, you can use the quick-set feature. Never use the quick-set feature when the time showing on the dial is between 9-pm and 3-am, as this might cause a mechanical conflict involving the normal automatic advance sequence. If necessary, advance the hands past 3-am and when you are finished setting the calendar, advance the time to the correct hour/minutes. Keep in mind that the calendar will automatically advance again, at about midnight. Never move the hands backward, more than a few minutes (30 minutes).

Initiate Power

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).



example watch

DAYVIEW:**Setting the Time:**

Unscrew crown counter-clockwise. Pull crown out two clicks and rotate clockwise to current time. Please note that day and date will change when you pass 12AM (midnight). This watch features a quick-set calendar. The calendar normally advances automatically when the time approaches 12-pm. The only time you should need to adjust the calendar is if the month has less than 31 days or if the watch has been left inactive. You can simply move the hand forward past 12-pm, as many cycles as is required to get the calendar synchronized, or, you can use the quick-set feature. Never use the quick-set feature when the time showing on the dial is between 9-pm and 3-am, as this might cause a mechanical conflict involving the normal automatic advance sequence. If necessary, advance the hands past 3-am and when you are finished setting the calendar, advance the time to the correct hour/minutes. Keep in mind that the calendar will automatically advance again, at about midnight. Never move the hands backward, more than a few minutes (30 minutes).

Setting the Date:

Unscrew crown counter-clockwise. To set date, pull crown out one click and rotate clockwise to current date. To set day, rotate counter-clockwise. Return crown to original position.

Initiate Power:

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).



example watch



example watch

DUALTIMER:**Setting the Time:**

Both times are controlled by the single crown. Pull crown out. To set time at 9 o'clock position, rotate crown clockwise to correct time. Both time zones should be moving. To set time at 3 o'clock position, rotate crown counter-clockwise to correct time. The hour hand & minute hand will change at the 3 o'clock position, the minute hand will change at the 9 o'clock position, but the hour hand at 9 o'clock position will remain fixed.

Setting the Date:

To set date of month, press bottom button located at 8 O'clock until current date is indicated. (See General Care below).

Initiate Power

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).

MECHANICA:**Setting the Time:**

Pull crown out and rotate clockwise to correct time. Return crown to original position.

Initiate Power:

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).

Please note:

This section applies to all automatic (self-winding) skeletal models, including those with the small sweep second hand at the sub-dial (6:00) position.



example watch



example watch

SKYTIMER HAND-WINDING SKELETON

This is similar to the automatic winding skeleton except due to the greatly reduced size, it is wound manually by hand.

Setting:

Pull crown out and rotate clockwise to advance current time. Return crown to original position when finished.

Please note:

Only turn the hands clockwise when setting. Wind clockwise with crown fully in and do not over-wind. When the turning becomes slightly tighter, it is fully wound and should provide about 24 hours of power between windings. (See General Care below).

**DIPLOMAT SERIES 6-HANDS WITH BIG DATE**

This unit features the month, day-of-week and 24-hrs in three sub displays with a two digit big date at the 12:00 position.

Setting:

Pull crown out and rotate clockwise to advance current time. Return crown to original position when finished.

Please note:

Do not operate the date button (located at 2:00) when the time showing is between 9-PM and 3-AM. Only turn the hands clockwise when setting. The 24-hr display (at 6:00) is calibrated to the same time showing on the large hour hand and is not adjusted.

Setting Big Date:

This will advance automatically as the time showing approaches midnight. The button on the upper right (at 2:00) will advance the date rapidly, once for each press. The register goes up to 39 before returning to 00. There are no dates 32-39 or 00. The register must therefore be reset after the new month begins.

Setting the Month:

The month wheel does not advance automatically. It is manually advanced at the beginning of the new month by pressing the button located at the lower right (4:00 position) twice for each advance.

Initiate Power:

Wind crown clockwise 10-15 turns prior to wearing. (See General Care below).

Quick-set Calendars:

The calendar normally advances automatically when the time approaches 12-pm. The only time you should need to adjust the calendar is if the month has less than 31 days or if the watch has been left inactive. You can simply move the hand forward past 12-pm, as many cycles as is required to get the calendar synchronized, or, you can use the quick-set feature. Never use the quick-set feature when the time showing on the dial is between 9-pm and 3-am, as this might cause a mechanical conflict involving the normal automatic advance sequence. If necessary, advance the hands past 3-am and when you are finished setting the calendar, advance the time to the correct hour/minutes. Keep in mind that the calendar will automatically advance again, at about midnight. Never move the hands backward, more than a few minutes (30 minutes).

General Care — All watches:

Always keep the setting-stem ('crown') closed when not adjusting. Never attempt to adjust the watch, or press any buttons if moisture is present on the case. Water-resistant watches are designed to be protected from damage due to exposure with water. However, it is not recommended that these watches be intentionally submerged in water or exposed to moisture. If exposed to salt or chlorine water, fresh water should be sprinkled on the watch and then dried off.

These are delicate mechanical instruments. While shock protected, they should not be subjected to excessively rough conditions. If the crystal (lens) cracks or breaks, have the watch serviced at once.